


Remote Guide

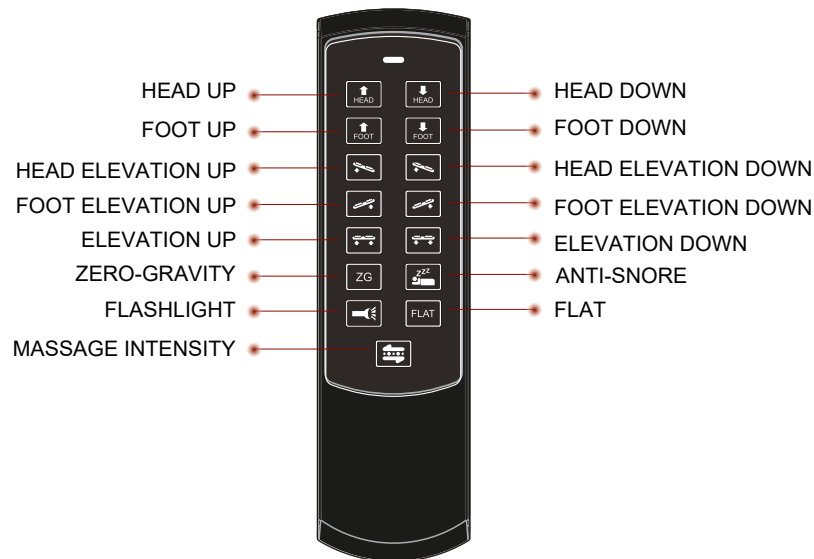

Message Intensity: Click this button to switch message intensity, 3 levels of intensity.

Button & Indicator

Button & Indicator	Key Value	Description	Button & Indicator	Key Value	Description
Button 1	HEAD UP	Press and hold to extend the head actuator; release to stop.	Button 9	HEAD DOWN	Press and hold to retract the head actuator; release to stop.
Button 2	FOOT UP	Press and hold to retract the head actuator; release to stop.	Button 10	FOOT DOWN	Press and hold to retract the foot actuator; release to stop.
Button 3	HEAD ELEVATION UP	Press and hold to extend the head elevation actuator; release to stop.	Button 11	HEAD ELEVATION DOWN	Press and hold to retract the head elevation actuator; release to stop.
Button 4	FOOT ELEVATION UP	Press and hold to extend the foot elevation actuator; release to stop.	Button 12	FOOT ELEVATION DOWN	Press and hold to retract the foot elevation actuator; release to stop.
Button 5	ELEVATION UP	Press and hold to extend the elevation actuator; release to stop.	Button 13	ELEVATION DOWN	Press and hold to retract the elevation actuator; release to stop.
Button 6	ZERO-GRAVITY	Press once to move to the ZERO GRAVITY position.	Button 14	ANTI-SNORE	Press once to move to the Anti-Snore position.
Button 7	FLASHLIGHT	Press and hold to turn on the flashlight; release to turn it off.	Button 15	FLAT	Press once to flatten the bed.
Button 8	MESSAGE INTENSITY	Press once to cycle through message intensities: 1-2-3-0.			

Button & Indicator

All Memory Positions

Adjust head and/or foot section(s) to desired positions. Press and hold the position button until the back-light on remote flashes.

Release button and wait for flash to stop. Position button has now been re-programmed. Repeat process if new preset position is desired.


Pairing Remote To Base

Pairing Method 1

Step 1: Unplug the power cord, power on after 5 seconds. The control box indicator light turns blue, underbed light flashes (if underbed light is installed): control box is now in pairing mode.

Step 2: Press & hold the remote Head Up and Head Down button. Remote backlight flashes: the remote is now in pairing mode. Pairing is complete once remote backlight stops flashing and stays on and the control box indicator light turns green (or under bed light stops flashing and goes out). Pairing is complete.

Note: Once there is power to the base again, the control box will be in pairing mode for the first 10 seconds. If the remote has already been successfully paired prior to powering off, you do not need to pair the remote again. After 10 seconds, the control box indicator light turns green (or under bed light stops flashing and goes out). Pairing is complete. You can use remote to operate the bed directly.

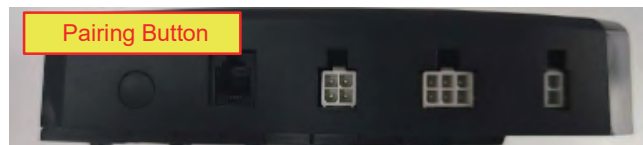


Pairing Method 2

Step 1: Double click the control box pairing button. The control box indicator light turns blue, under bed light flashes (if underbed light is installed): control box is now in pairing mode.

Step 2: Press & hold the Head Up and Head Down button. Remote backlight flashes: the remote is now in pairing mode. Pairing is complete once remote backlight stops flashing and stays on and the control box indicator light turns green (or under bed light stops flashing and goes out). Pairing is complete.

If the pairing mode times out, please repeat the above actions until the pairing is successful.

Guide de la télécommande

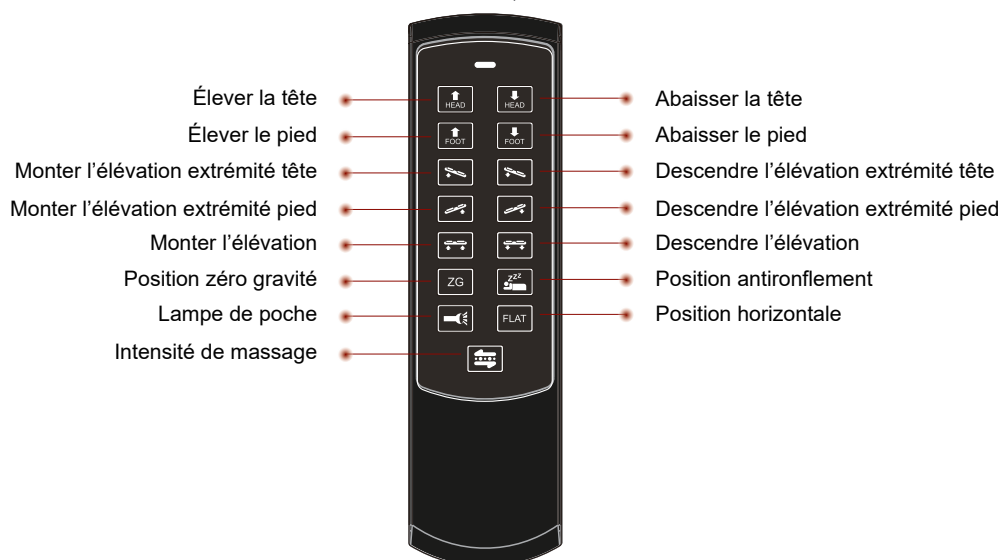

Intensité de massage : cliquez sur ce bouton pour passer d'une intensité de massage à l'autre : 3 niveaux d'intensité.

Jumelage de la télécommande avec la base

Étape 1 : Débranchez le cordon d'alimentation, puis rebranchez-le après 5 secondes. Le voyant lumineux du boîtier de commande passe au bleu et l'éclairage sous le lit clignote (le cas échéant). Le boîtier de commande est maintenant en mode jumelage.

Étape 2 : Appuyez sur les boutons « Head Up » et « Head Down » de la télécommande et maintenez-les enfoncés. Le rétroéclairage de la télécommande clignote, indiquant que la télécommande est maintenant en mode jumelage. Le jumelage est terminé lorsque le rétroéclairage de la télécommande cesse de clignoter et reste allumé, et que le voyant lumineux du boîtier de commande passe au vert (ou que l'éclairage sous le lit cesse de clignoter et s'éteint). Le jumelage est alors terminé.

Remarque : Une fois que la base est à nouveau sous tension, le boîtier de commande sera en mode jumelage pendant les 10 premières secondes. Si la télécommande a déjà été jumelée avec succès avant la mise hors tension, vous n'avez pas besoin de la jumeler à nouveau. Après les 10 secondes, le voyant lumineux du boîtier de commande passera au vert (ou l'éclairage sous le lit cessera de clignoter et s'éteindra). Le jumelage sera alors terminé. Vous pourrez utiliser la télécommande pour commander directement la base de lit.

Méthode de jumelage 1



Méthode de jumelage 2

Étape 1 : Double-cliquez sur le bouton de jumelage (« PAIR ») du boîtier de commande. Le voyant lumineux du boîtier de commande passe au bleu et l'éclairage sous le lit clignote (le cas échéant), indiquant que le boîtier de commande est maintenant en mode jumelage.

Étape 2 : Appuyez sur les boutons « Head Up » et « Head Down » de la télécommande et maintenez-les enfoncés. Le rétroéclairage de la télécommande clignote, indiquant que la télécommande est maintenant en mode jumelage. Le jumelage est terminé lorsque le rétroéclairage de la télécommande cesse de clignoter et reste allumé, et que le voyant lumineux du boîtier de commande passe au vert (ou que l'éclairage sous le lit cesse de clignoter et s'éteint). Le jumelage est alors terminé.

Si la durée du mode jumelage s'est écoulée, répétez les étapes ci-dessus jusqu'à ce que le jumelage soit réussi.