





## Jumelage de la télécommande avec la base

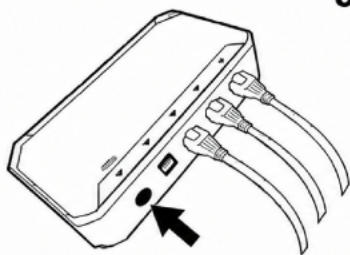


### Étape 1 : c

Appuyez deux fois sur le bouton d'appairage situé sur le boîtier de contrôle (le voyant s'allumera en bleu pendant la procédure d'appairage).

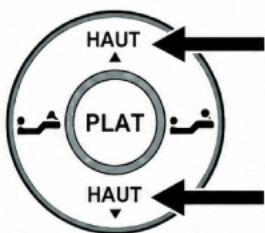

### Étape 2 :

Appuyez simultanément sur les boutons HAUT (tête relevée) et BAS (tête abaissée) sur une télécommande jusqu'à ce que le voyant devienne vert.

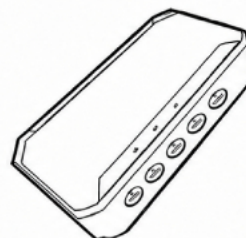

### IMPORTANT


Assurez-vous que les câbles du moteur de tête gauche et de tête droite sont bien branchés dans le boîtier de contrôle.

Conseil : Répétez les deux étapes ci-dessus pour appairer l'autre télécommande.


# ZEUS SPLIT HEAD REMOTE PAIRING GUIDE




## PAIRING REMOTES TO BASE

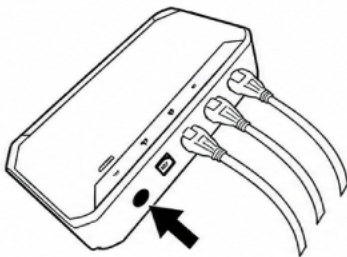

Step 1:  
Double click the Pairing button  
on the control box ( light will  
turn on blue during the pairing  
process).

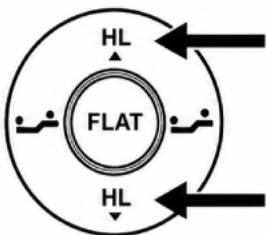

Step 2:  
Simultaneously press the  
head up and head down  
buttons together on one  
remote until light turns green.

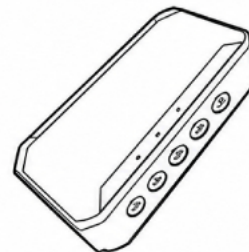

### IMPORTANT

Please ensure left head  
motor cable and right  
head motor cable are  
plugged into the control  
box correctly.

Tip: Repeat above two steps to pair the other remote.